


# ILER-DDS V2.1

## Assembly manual

Last review: February 1, 2018

[ea3gcy@gmail.com](mailto:ea3gcy@gmail.com)

Latest updates and news: [www.ea3gcy.com](http://www.ea3gcy.com).

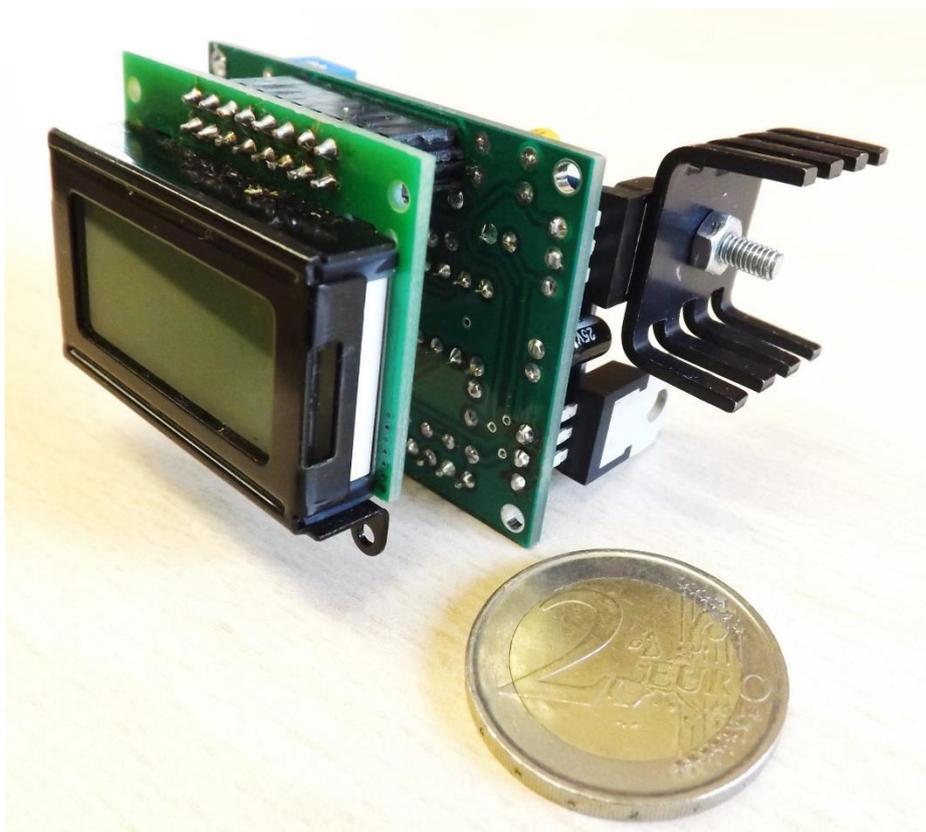

Thanks for purchasing the “ILER-DDS” VFO kit  
Enjoy building QRP ! 73 Javier Solans, ea3gcy

# TABLE OF CONTENTS

TOC.....	2
INTRODUCTION.....	3
SPECIFICATIONS.....	3
PART ONE: ASSEMBLY AND INSTALLATION.....	4
TIPS FOR FIRST TIME BUILDERS.....	4
PARTS LIST.....	6
ASSEMBLY.....	8
INSTALLATION.....	9
DIGITAL NOISE.....	12
ILER-DDS WIRING.....	13
SCHEMATICS.....	13
PART TWO: PROGRAMMING AND USING THE VFO/DDS .....	15
FACTORY CONFIGURATION.....	15
USING THE ILER-DDS.....	15
USER MENUS.....	16
MENU FLOWCHART.....	17
CONFIGURATION.....	18
ANNEXES.....	22
IF YOUR KIT DOES NOT WORK AFTER FINAL ASSEMBLY .....	24
LIMITED WARRANTY .....	25
OUTPUT SIGNAL IMAGES.....	26

# INTRODUCTION

The ILER-DDS VFO is a RF generator based on the Analog Devices AD9850 DDS chip ([www.analog.com](http://www.analog.com)). At present, the direct digital synthesis (DDS) is an excellent solution for the LO on single-band and multiband amateur equipment, at a very moderate cost. Due to the very high frequency reference (125 MHz), the ILER-DDS offers a very clean signal when working at relatively low frequencies as 11, 20 or even 30 MHz. (< 25% of the reference frequency). If you want to delve deeper into the theory of DDS we advice you to read the abundant internet literature. The use of a "sandwich" single block mechanical configuration and a single encoder with a built-in push-button to control the operation makes this VFO/DDS an extremely versatile "block" easy to integrate in many projects for amateur rigs.

# SPECIFICATIONS

- Universal VFO for all ILER, MFT, EGV transceivers and similar projects.
- **S-METER** level indicator with digit from S-0 to S9+ and 10-level graphical bar.
- S-METER voltage input from 0 to 5V direct or inverted, with independent adjustment of each level.
- Dual **VFO A/B**
- **RIT / SPLIT** function without limit
- Configurable Tuning Steps: selected ones or all steps (from 10 Hz to 10 MHz).
- Programmable IF Offset.  $IF=RF+VFO$ ,  $IF=RF-VFO$ ,  $IF=VFO-RF$ ,  $IF = 0$  (RF generator).
- Programmable upper and lower band limit.
- Fine calibration of the frequency reference by software (up to 1 Hz accuracy).
- Voltmeter display with 0.1 V accuracy (0.01 V calibration).
- Auxiliary I/O pins for expansion.
- **2 x SINUSOIDAL WAVE OUTPUT.**
- **2 x SQUARE WAVE OUTPUT.**
- LOW SPURIOUS. TX and RX mixers spectrum is equal to or better than a VXO one.
- DDS AD9850BRS integrated circuit.
- Reference clock: 125 MHz.
- Signal output level at 200 ohms: 300mVpp 35MHz // 800mVpp 20MHz
- User programmable "Welcome message": callsign or name.
- LOCK function for push button and encoder.
- Automatic record of last used frequency or current frequency.
- 2 Line x 8 character LCD with AUTO-ON-OFF configurable backlight.
- Power supply: 7.5-14 V about 90-100mA (no backlight)
- Outboard encoder for a more versatile mechanical configuration.
- Small size "sandwich" module, easy to fix with screws or glue.
- Total space used: 51 x 36 x 40 mm W-H-L (with soldered LCD 35 mm L). LCD window size 29 x 19 mm.
- Soft touch non-stop rotary encoder (like commercial equipment).
- 24 steps per revolution rotation encoder (maximum speed 36 step/s).
- All operations are executed with the encoder and pushbutton.
- Simple, direct, and immediate configuration through menus.
- All settings are stored in EEPROM (1 million write/read cycles (minimum) and 100-year).
- PIC18F2525-I/SP microcontroller 20 MHz clock.

# PART ONE:

## ASSEMBLY AND INSTALLATION

**PLEASE READ THOROUGHLY ALL THE MANUAL AT LEAST ONCE BEFORE ANY WORK IS DONE.**

### TIPS FOR FIRST TIME BUILDERS

#### Tools required:


- Small tipped soldering iron of about 25-30 W rating, small side cutters, wire strippers, pliers, long nosed pliers, sharp hobby knife, and screw driver for the M3 bolt.
- You will also need good lighting and a magnifying glass to read the fine print on some parts.

#### Instrumentation required:

- Multimeter. Frequency Counter or calibrated HF receiver.

#### Soldering:

There are two important things which need to be done to ensure the successful operation of a kit: one is to put the right part into the proper place on the board; the other is good soldering.

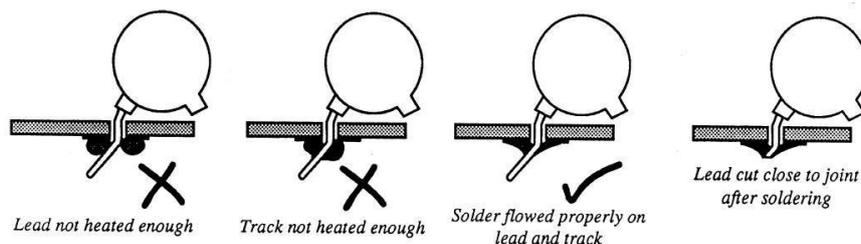

To properly solder you must use the correct type of iron and the right quality of solder. Use a small tipped soldering iron whose bit is short and pointed at the end. The iron should be about 25-30 W (if it is not thermostatically controlled). Only use multicore solder for electronics. NEVER use any extra flux. You should hold the hot iron in contact with both the board and the part lead for about two seconds to heat them up. Then, keeping the iron in place, touch the solder onto the junction of lead and track and wait about two seconds or so until the solder flows along the lead and track to form a good joint. Now remove the iron. The iron should have been in contact with the part and circuit track for a total time of about 4 seconds. It is a good idea to drag the tip of the iron up the component lead as you remove it from the joint, this helps to pull any excess solder up with it and enables good flow along the component lead.

**Finding the right part:****IC's**

The board outline for ICs has a "U" notch on one end. This indicates the pin 1 end of the IC. There is also a notch on one end of the sockets. This end goes over the "U" notch outline on the board. ICs have usually pin 1 marked with a round dimple or dot. This end of IC will go towards the notch on the socket or "U" on the outline.

**Electrolytic capacitors:**

These must be installed with the correct polarity. The positive (+) lead is always the long lead. The negative (-) lead is marked by a stripe on the body of the capacitor can. Make sure the plus end of the cap goes toward the hole labeled with the (+).

**Transistors and diodes:**

The transistors have the silhouette printed on the board. The diodes must be placed in the correct polarity position, they have a color band on their body that must match the printed drawing on the board.

# PARTS LIST

Resistors					
Checked	Ref.	Value	Ident./Comment	Circuit section	
	R1	10K	brown-black-orange	MCLR uC pin	
	R2	10K	brown-black-orange	ADC divider	
	R3	4K7	yellow-violet-red	ADC divider	
	R4	--	502 Adjustable	Contrast (1)	
	R5	--	See Note 2	Backlight limiter (2)	
	Rx-Ry	0	1/16W 0ohm. Factory soldered	PCB links	

Capacitors					
Checked	Ref.	Value	Ident./Comment	Circuit section	
	C1	100n	104 or 0.1	Power	
	C2	10uF	10uf 25V or 35V (elec)	Power	
	C3	100n	104 or 0.1	Power	
	C4	18p	SMD Factory soldered	Uc	
	C5	18p	SMD Factory soldered	uC	
	C6	100n	104 or 0.1	uC	
	C7	100n	104 or 0.1	uC	
	C8	10uF	10uf 25V or 35V (elec)	Power	
		100n	100n	104 or 0.1	
		100n	100n	104 or 0.1	
				On encoder terminals	
				On encoder terminals	

Semiconductors, Crystal, Inductor, Encoder, Modules					
Checked	Ref.	Value	Ident./Comment	Circuit section	
	IC1	7805	7805 5V regulator	Regulator	
	IC2	18F2525-I/SP	Microcontroller	Controller	
	IC3	MCP1825S33	MCP1825S33 3.3V regulator	Regulator	
	X1	20MHz.	20MHz cristal	uC clock	
	L1	100uH	SMD Factory soldered	uC +V	
	Encoder	Bourns Encoder PEC16	Rotary Encoder/Switch	Encoder/Switch	
	LCD 8x2	LCD 8x2	LCD Display 8x2 (backlight)	Display	
	AD9850	AD9850 HC-SR08	DDS module	DDS	

Hardware					
Checked	Ref.	Value/Type	Ident./Comment	Circuit section	
	IC2 socket	28 pins IC socket		uC	
	Pins strip	Pins for connections	--	Connections	
	Pin strip sockets	Cut with various measures.	--	Connections	
	Heatsink for IC2	Heatsink for IC2	--	Heatsink	
	M3x10 screw	Screw for IC1 heatsink	--	Heatsink	
	M3 nut	M3 nut for M3x10 screw	--	Heatsink	

**Note 1. R4**

R4 is adjusted to obtain the best contrast of the LCD.

**Note 2. R5 values**

Your kit may have three types of similar LCD.

R5 is different depending on the type of LCD. All resistors are included in the kit, but only need to be used according to the following table:

LCD Type	R5 (Backlight)
GREEN 0802A (Ver1.0)	10 $\Omega$ brown-black-black
BLUE RT0802A	47 $\Omega$ yellow-violet-black
BLUE LCM0802C (V1.0)	47 $\Omega$ yellow-violet-black


You can vary slightly the R5 value.

< R5 (less): increases backlight (R5 can never be 0  $\Omega$ ).



If you want the maximum level of backlight you can connect the pin 15 of the LCD directly to 5V, but note that you can increase the total consumption by about 20mA.

# ASSEMBLY

As many modern kits, the ILER-DDS is designed to be easily assembled by medium-experience builders. SMD components are already installed and there are no hard-to-install parts on the kit.

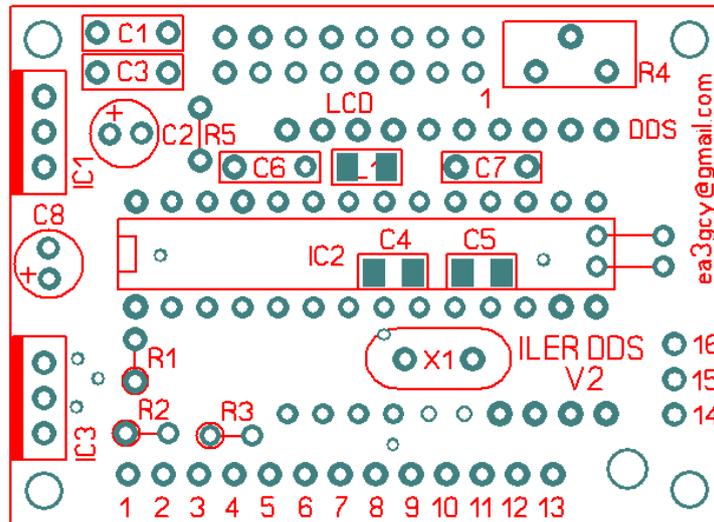

It is advisable that you inventory all parts to make sure everything is available and ready for assembly. Each builder may have his/her own way of organizing parts, but if you do not, you might try using a block of Styrofoam packing material. Parts may be sorted by type and size (ohms, microfarads etc).

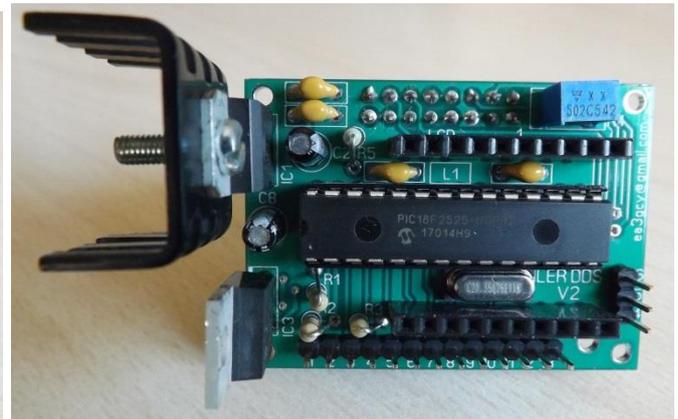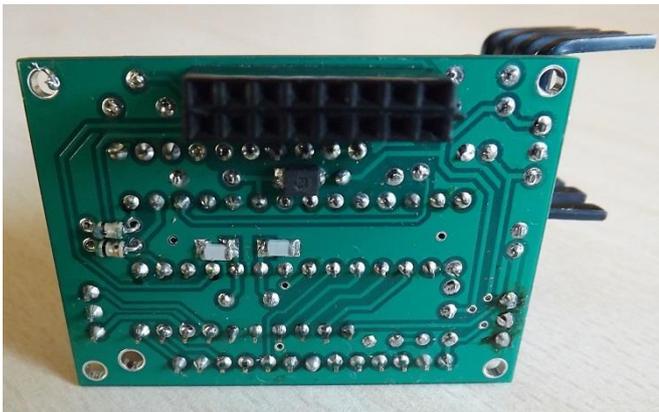

# RECOMMENDED ASSEMBLY SEQUENCE

I strongly recommend that you install the parts in the following order:

1. Resistors. All resistors are placed vertically. R4 is an adjustable resistor, insert it as shown in the picture.
2. Capacitors. C2 and C8 are electrolytic capacitors, the longer terminal is positive. There is a "+" printed on the PCB.
3. Crystal. Open its legs carefully and insert it into the PCB.
4. IC socket for IC2. Note that the "u" mark on one end must match that marked on the board silkscreen. Ensure that it lies flat on the board.
5. Male and female terminal strips. Ensure that they are straight and flat to the PCB. There are four female socket strips (two of 8 pin to be soldered to the LCD, and two of 10 pin for AD9850 module). In order not to be mistaken, observe the photographs carefully.
6. Voltage regulator. Place the 7805 IC1 and MCP1825S IC3 with its lettering facing the board. Place to IC1 the small heatsink included with the kit, with the "U" facing outwards (see the cover photo).
7. IC2. Insert the PIC18F2525-I/SP microcontroller into its socket..
8. LCD and DDS module. Insert the LCD and AD9850 DDS module into their respective sockets.

# INSTALLATION

PIN FUNCTION		
Marking	Function	uC bit
1	+12V	+12V
2	GND	GND
3	ENCODER_A	RB5
4	ENCODER_B	RB4
5	PULSADOR	RB3
6	AUX	RB2
7	AUX	RB1
8	TX INPUT (RIT) to GND on TX	RB0
9	AUX	RA4
10	S-METER INPUT	RA5
11	SINE WAVE OUTPUT B (from AD9850 module no LPF)	OUTB
12	GND	GND
13	SINE WAVE OUTPUT A (AD9850 module LPF built in)	OUTA
14	SQUARE WAVE OUTPUT B	SQRB
15	GND	GND
16	SQUARE WAVE OUTPUT A	SQRA

## Mechanical Installation


**Important: Do not rush to make the mechanical installation. It is highly recommended that you calmly study every possible way to place the DDS assembly block in your rig. There are some wiring requirements that should be taken into consideration (see "ILER-DDS Wiring"). Take care when planning the configuration most suitable for your application.**

As you can see, the ILER-DDS block is designed to be easily incorporated into any existing rig, being receivers, transceivers or as a general purpose laboratory RF generator.

Without doubt, there are many ways of implementing the integration of the ILER-DDS on your project. Mechanically, there are two ways to attach the ILER-DDS block: with screws or with glue. I recommend using "contact adhesive" on the LCD frame and the box front panel. A thin "line" of glue around the LCD frame is sufficient. This is an extremely simple and safe method, and provides very good aesthetic results. If necessary, you can always remove the LCD and clean the glue residue.

Do not use hard to remove adhesives such as cyanoacrylate, epoxy, etc.

In the pictures below, you can see a DDS block installation next to an ILER transceiver. The DDS is attached with glue. As the LCD is fixed to the panel the other two modules (control board and AD9850 module) can be unplugged when required.

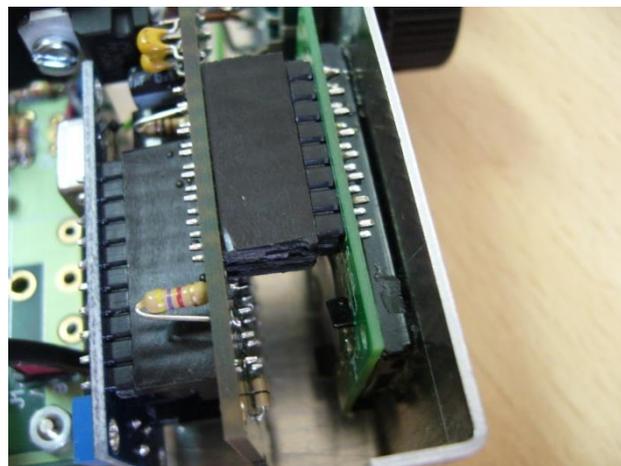

If the space available for the module integration is a bit short the depth of the sandwich may be reduced by 5-7 mm by directly soldering the LCD to the board, instead of using male and female headers. Please notice that if board removal is needed in the future, you will have to unsolder all pins from the LCD or the board.

**Note:** The routing and placing of the ILER-DDS wiring may change the "digital noise" perceived (see "Digital Noise"). For example the supply negative wire; the connection may be done through the shield of the OUT coaxial cable. If noise is objectionable you will have to proceed with a trial and error denoising process (see "ILER-DDS wiring").

## ILER Transceivers wiring.

If you have placed the VXO Components.  
You will have to cut or lift one leg of L7 to remove the supply to the VXO. **It is not required to remove any part from the VXO**



**It is possible to use either the VXO or the DDS?**

**May I work SOTA or backpack with the VXO and with the DDS at home?**

**Of course you do! You may have both and select one as needed.**


This is probably the only amateur transceiver which may be configured to work this way. Slick!

With its low power VXO it will be possible to operate on the field or up the summits with a small battery on your backpack. And with the DDS and its backlit LCD display, a bit higher on consumption, you will be able to operate on your car or at home.

It is simple:

Build your ILER complete, including the VXO and adjust it as per the manual. You will have to place the ILER on a box with a dual tuning system: **the Polyvaricon for the VXO and the encoder for the DDS.**

Then, a DPDT switch must be used to route the supply for the DDS on one of the circuits, and to connect L7 with the pad where it was connected previously (VXO supply).

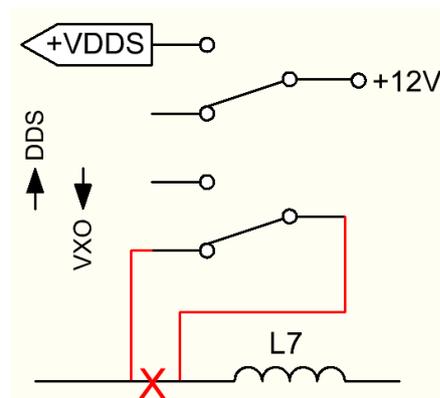

## DIGITAL NOISE

Noise coming from digital circuits on a radio receptor may be considered as normal when they are of low level and the listening comfort and quality is not affected.

There are two types of noise: DDS generated spurs and noise from the digital control and display.

The design used on the ILER-DDS guarantees a low spur level when compared with other amateur products of similar price. In all ILER versions the heterodyne purity is very high either in Rx or Tx. Due to the filtering used little spurs are generated which may be noticed in reception, and also in transmission.

**All tests carried out with our ILER-DDS prototypes with ILER transceivers have been highly satisfactory.**

### *LCD noise*

LCDs are known to be a source of noise. Sometimes one may think the noises are coming from the RF generator but they are coming from the display. They may be recognized as they shift in frequency, especially after a cold start-up. Should you perceive a background noise on your transceiver without any antenna connected, and the noise changes when you touch or push the LCD, this is an LCD noise.

### *Encoder noise and other switching/digital noises.*

The second, very common source of internal noises on a receiver is the switching of internal signals, multiplexing, etc, or external signals, such as the ones from the encoder.

When you install the encoder, please remember to place a pair of 100nF capacitors on the encoder terminals.

If you do a careful and tidy wiring of the ILER-DDS, we are sure that you will get excellent results.

### **Note:**

EA3GCY can't guarantee the result of fitting an ILER-DDS with receiver or transmitter kits others than the ones from ea3gcy. The different combination of IF-RF, signal levels, impedances, etc. may let to unpredictable results. You should know the details of your particular setup and enough expertise to evaluate the suitability of the ILER-DDS for your purposes.

# ILER-DDS WIRING


The wiring is very simple but is important how you do it.

Some advices to be taken into account:

- For the output signal use good quality, fine coaxial cable (ej. RG-174).
- Place the encoder as close as possible to the ILER-DDS block. If it is far away, and wires go by or over the transceiver circuit may introduce switching noises whenever the encoder is used.
- Even the supply wires to the connector or the ON-OFF switch may affect the noise level. Try with only one wire, the positive one, as the negative will be routed through the coax shield.
- It is not advisable to wire the LCD. **The LCD should be sandwiched with the control board!**




Do not forget to place two 100 nF capacitors directly between the encoder pins!

By following the previous advices, the wiring of the ILER-DDS is very simple. Please check the drawing:

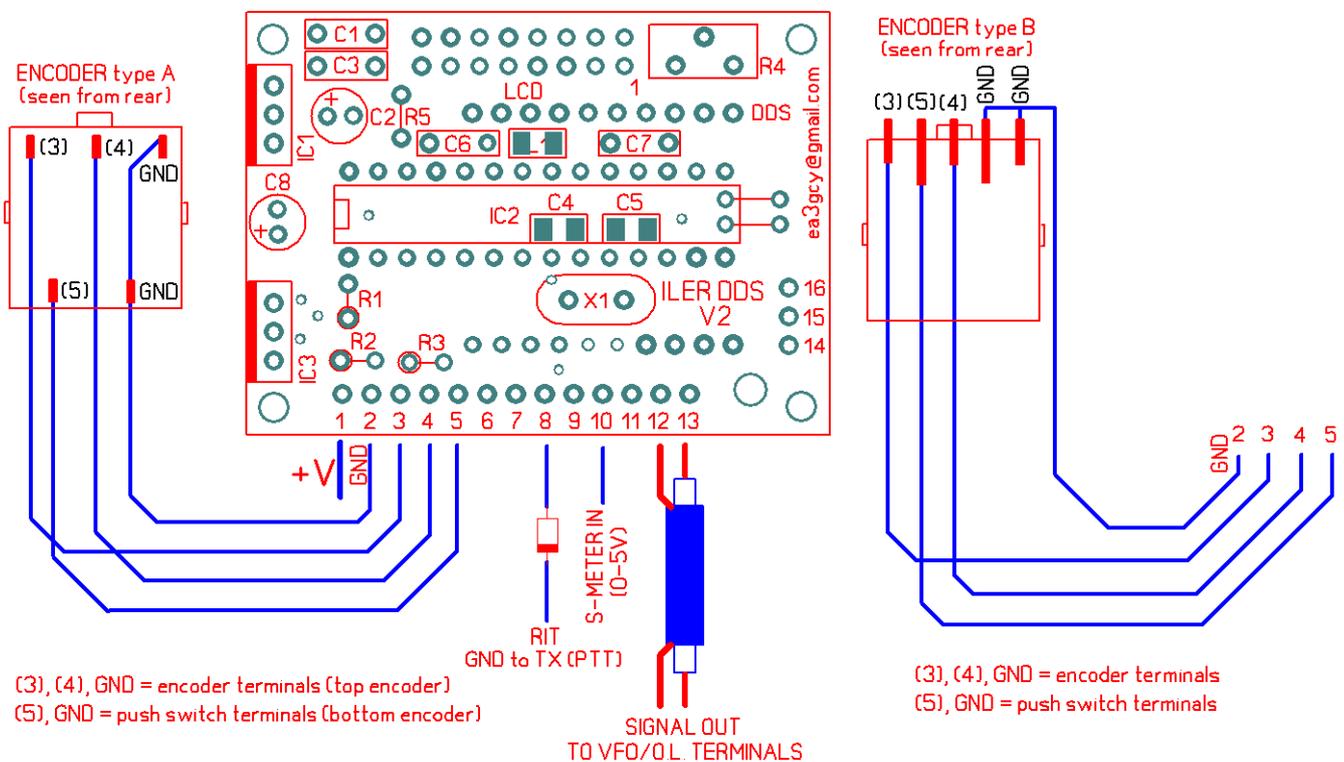

The wiring described is from the back of both the encoder and the control board.


Your ILER-DDS kit can incorporate two types of rotary encoder. The two models are the same but have their terminals positioned differently. Type A has the encoder terminals on top and the "push-switch" are below. The type B has all the above, the encoder terminals are shorter and the switch are longer.

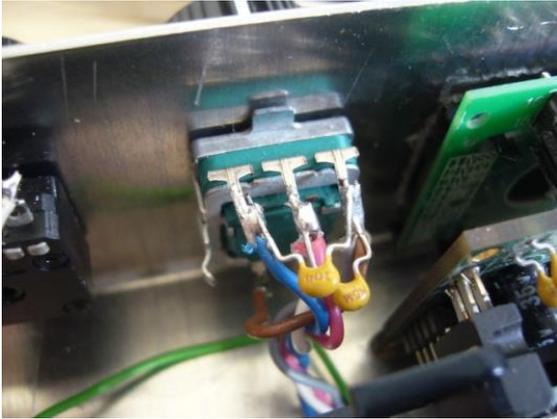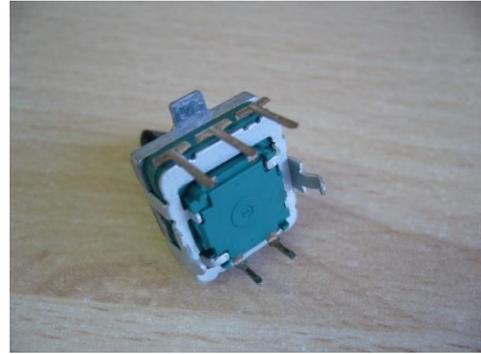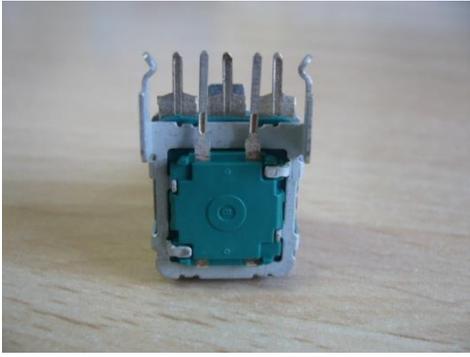

Please notice that none of the two models the "common" terminal is central. It is to the right.

Solder two 100 nF capacitors directly to the encoder pins (between active pins and ground).

## SCHEMATICS

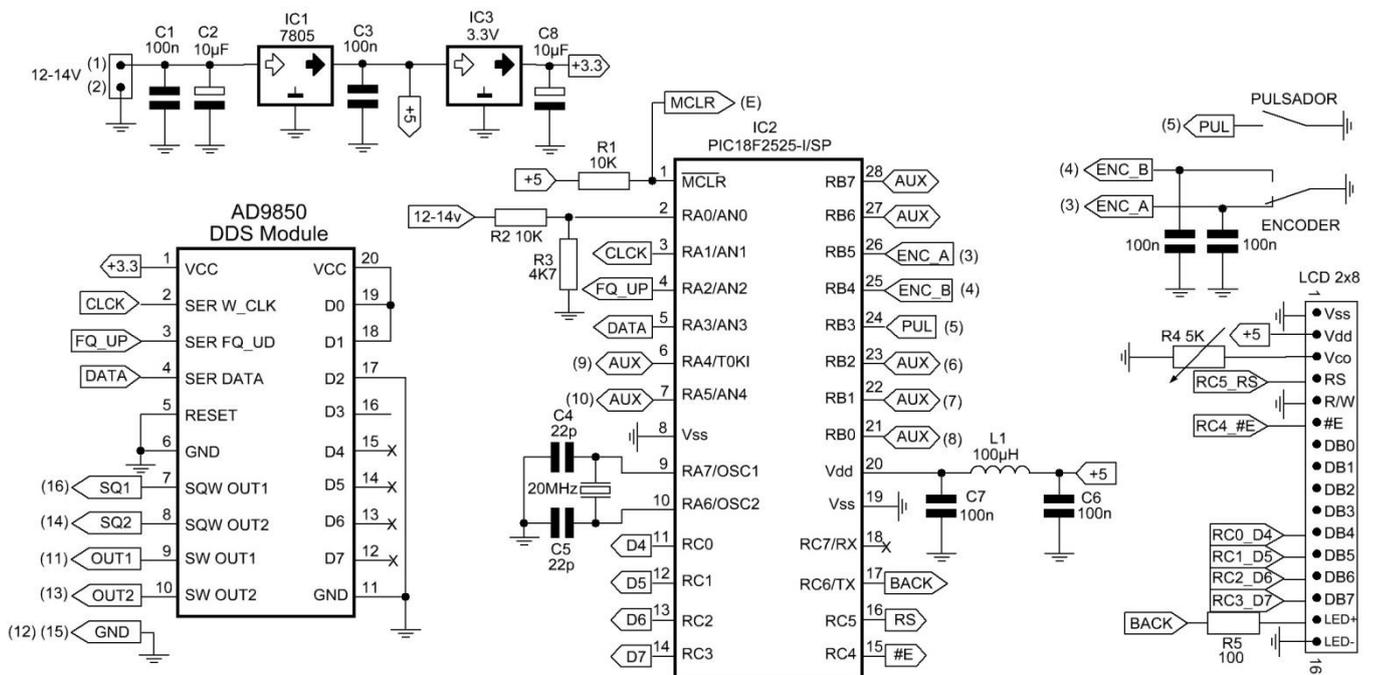

The numbers and letters in parentheses, correspond to those printed on the PCB

# PART TWO: PROGRAMMING AND USING THE VFO/DDS

## FACTORY CONFIGURATION

The ILER-DDS is configured to work with the **ILER-40**, with the following parameters:

**LOWER LIMIT:** 07.000 (Band lower limit: 7.000 MHz).

**UPPER LIMIT:** 07.300 (Band upper limit: 7.300 MHz).

**YOUR CALL ?:** CALL ON: EA3GCY

**IF FREQ:**  $IF = 04913500$  Mode:  $VFO = RF + FI$  ( for ILE-40)

IF is 4.913500 MHz and the output mode from the VFO/DDS is 7.000000 MHz + 4.913500 MHz

Please notice that the IF real offset is lower than the nominal frequency of the IF filter crystals (4.915.8 MHz).

**CAL FREQ:** +150 Hz (you will have to adjust it to compensate for tolerances)

**CAL VOLT:** *Calibrated.* The measuring error may be up to +/-10 %

You will have to adjust it, as each kit may be different due to the resistors used at the divider placed at the input of the ADC conversor (R2 and R3)

**S-METER CAL:** *Calibrated.* (for ILER-40)

**S-METER MODE:** *Reversed.*

**VFO A/B:** VFO-A

**RIT ON/OFF:** OFF

**CHANGE STEPS:** 1 kHz - 100 Hz.

**S-METER or VOLTS:** Volts

**SET INI FREQS:** *Current ones* (fixed frequencies are stored in VFO-A and in VFO-B)

**LCD BACKLIGHT:** ON (always lit)

**LOCK:** *Unlock*

## USING THE ILER-DDS

It is very simple. Once programmed, its use is highly intuitive.

### ***Dial tuning and step change:***

By turning right or left the rotary encoder the frequency respectively increases or decreases by the current "step".

	7	1	5	<u>0</u>	.	0	0
A			1	2	.	5	V

This is marked by an underline on the digit. For instance, the example shows the underline digit as the kHz units. Every step will move the frequency one kHz up or down. If the underline will be placed on the 100 Hz digit, the steps will be of 100 Hz each.

A quick push on the encoder will change the position of the underline among the preselected "CHANGE STEPS".

The letter A in the second line means that it is in the VFO-A

## User Menus

You may access the menus by pushing and holding the encoder pushbutton for more than 1 second. Then, turning the encoder will go through the user menus. One of the options is "EXIT" to exit without change. Please consult the cyclic sequence of the menu flowchart on next page. The access to the more frequently used functions is easy.

### 100 kHz steps:

This may be used to move rapidly throughout the band. Push the encoder for more than 1 second. "100 kHz STEP" will appear on the screen. A quick push on the encoder will bring you back to the frequency dial with 100 kHz steps. Once you are on the place of the dial you want, another quick push will bring you back to the normal tuning steps.

	1	0	0	k	H	z	
		S	T	E	P		

### VFO A/B:

Switch between VFO-A and VFO-B. Press the button and you will return to the dial screen, if before it was in the VFO-A, the VFO-B will appear and vice-versa. The letter of the current VFO appears in the first box of line 2 of the screen.

		V	F	O			
		A	/	B			

### RIT ON/OFF:

Enables or disables the RIT function. Press to toggle between RIT ON and OFF. When the RIT is activated, the symbols =  $\uparrow$   $\downarrow$  indicate whether the frequency is equal, has risen, or has fallen with respect to the previous frequency.

Note: If the TX signal of the transceiver is not connected to the DDS, then the RIT will not act (see the connection table and the Annex "Connecting the RIT input").

### CHANGE STEPS:

There are five fixed sequences of steps available for selection:  
1K-100H-20H ; 1K-100H ; 100H-20H ; 10K-1K-100H ; ALL STEPS

Turn the encoder until "CHANGE STEPS" appears and make a quick push.

By turning the encoder you will enter a submenu to select with the encoder the step sequence needed. A quick push on the encoder will bring you back with the new sequence active.

Note: The "ALL STEPS" option is meant to be used when the ILER-DDS is used as RF generator.

	C	H	A	N	G	E	
	S	T	E	P	S		

### S-METER o VOLTS:

This screen allows switching between the display of the Voltmeter or the S-METER. If you want to use the S-METER, see the section "S-METER CAL".

S	-	M	E	T	E	R	
o	r		V	O	L	T	S

### SET INI FREQS:

In this menu chosen to save the current frequencies as initial frequencies each time the ILER-DDS is started or automatically save the last frequency before turning off the ILER-DDS. When "SET INI FREQS" appears, press the button and moving the encoder you can select between "CURRENT ONES" (saves the current frequencies as start frequencies) or "AUTO" (it will save as the start frequencies the last frequencies where it was before switching off) .

S	E	T		I	N	I	
	F	R	E	Q	S		

Note: this function stores the VFO-A and VFO-B frequencies.

### LCD BACKLIGHT:

The LCD backlight mode of operation may be selected with this menu entry. Push the encoder for more than 1 second, turn the encoder until "LCD BACK LIGHT" appears and make a quick push. By turning the encoder you will cycle between "AUTO" (backlight will automatically turn off after 10 seconds of encoder or pushbutton inactivity), "ON" (LCD always lit) or "OFF" (LCD always off). A quick push on the encoder will bring you back with the new backlight option to the frequency dial.

L	C	D		B	A	C	K
	L	I	G	H	T		

### LOCK:

This function allows an easy and fast lock or unlock procedure for the dial when you are working on a fixed frequency. Push the encoder for more than 1 second, turn the encoder until LOCK appears on the screen and make a quick push. LCD will turn off and the encoder will remain inactive. To recover push the encoder for more than 1 second.


		L	O	C	K		
.	.	.	.	.	.	.	.

### EXIT:

This menu entry allows you to go back to the frequency dial without changes. You only need to make a quick push on the encoder.

		E	X	I	T		
.	.	.	.	.	.	.	.

## MENU FLOWCHART

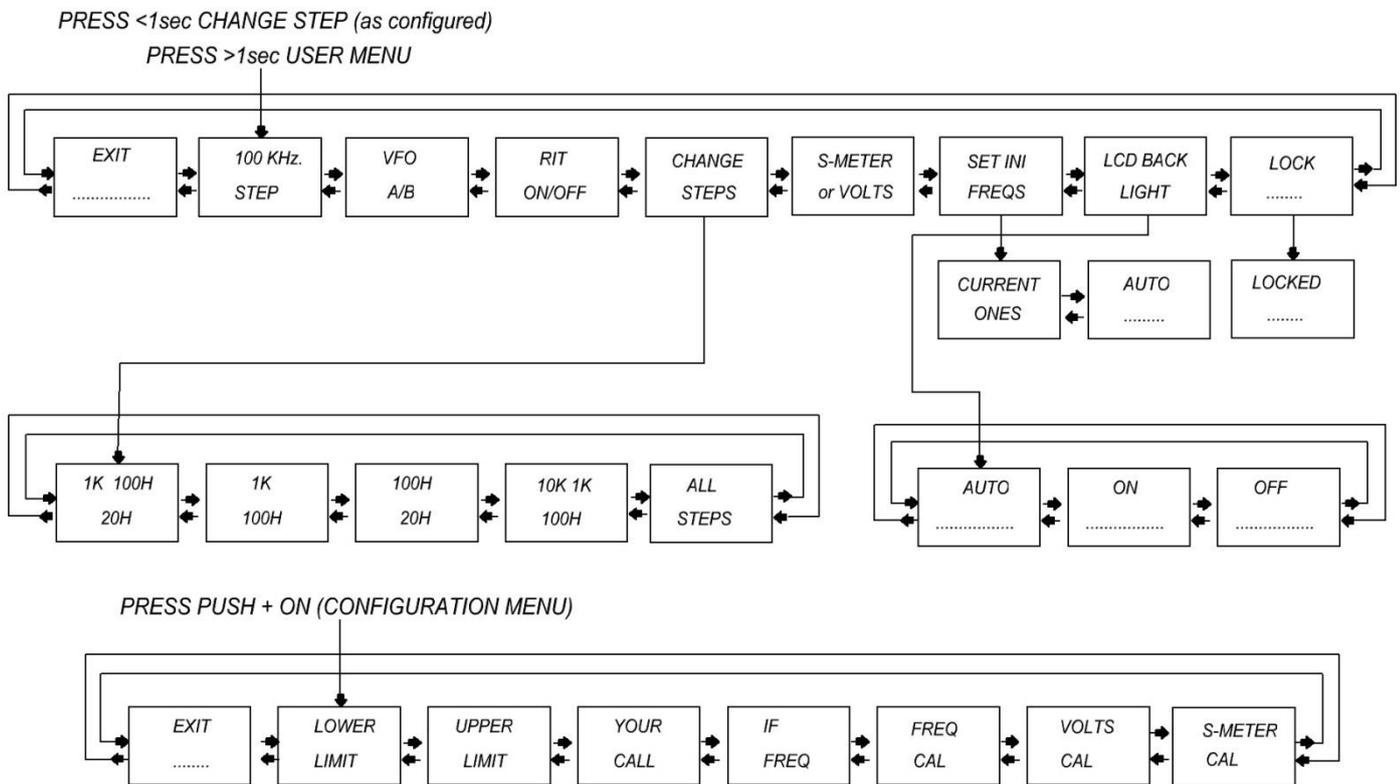

ILER\_DDS MENU FLOWCHART

# CONFIGURATION

In principle the ILER-DDS may seem very complicated, but it is not.

Prior to making any changes in the configuration you will have to study your project needs. Once you know exactly what do you want and how to do it: configuration will be easy, simple and fun!

**To activate the configuration menu you will have to power on the ILER-DDS while you keep pushed the encoder. (pushbutton + power-on).**

On screen you will see the first entry of the configuration menu, and turning the encoder will cycle through all the options. One of them is "EXIT", which will allow you to go back and start up the ILER-DDS normally without making any changes.

## LOWER LIMIT:

One of the entries is "LOWER LIMIT". This is used to set the band lower limit. Make a quick push, then you will have the option of entering any frequency in the range 0 to 40 MHz in 50 kHz steps.

This is usually the lower limit of the amateur band the receiver or transceiver is prepared for, but it may be placed at whatever frequency you like, even out of band. Once the frequency is set, make a quick push and the ILER-DDS will start-up normally.

Note: If you plan to use the ILER-DDS as RF generator you may adjust the limits to the ones you like for your generator, even 0 and 40 MHz!

	L	O	W	E	R		
	L	I	M	I	T		

	0	7	.	0	0	0	
	<	L	I	M	I	T	

## UPPER LIMIT:

Keep turning the encoder until you see "UPPER LIMIT" when you want to set the band upper limit. Make a quick push, then you will have the option of entering any frequency in the range 0 to 40 MHz in 50 kHz steps.

This is usually the upper limit of the amateur band the receiver or transceiver is prepared for, but it may be placed at whatever frequency you like, even out of band. Once the frequency is set, make a quick push and the ILER-DDS will start-up normally.

	U	P	P	E	R		
	L	I	M	I	T		

	0	7	.	3	0	0	
	>	L	I	M	I	T	

## YOUR CALL ?:

Keep turning the encoder until you see "YOUR CALL ?" and make a quick push. You will program a welcome message at turn-on, typically your amateur radio callsign.

With a quick push you will cycle between "CALL ON" and "CALL OFF". "CALL OFF" may be selected with a quick push when you do not want any welcome message.

Should you want to program a message, go to "CALL ON" and make a quick push. Now you will see the last programmed word (i.e. EA3GCY). You may enter up to 8 characters on the top line. The underline shows the position to be programmed. Turn the encoder to cycle between letters, numbers and symbols for each position. Once you are happy with the character selected make a quick push: the character will get stored and the cursor will move to the next position. Complete all 8 positions. One of the available characters is an empty space which may be also used. You will have to go through all 8 positions, even if they are blank spaces to complete the process. After the 8th position is programmed, a quick push will complete the process and the ILER-DDS will start-up normally.

	Y	O	U	R			
	C	A	L	L	?		

		C	A	L	L		
		O	N				

Take your time, as there is no "back-space". If you make a mistake you will have to repeat the process since the beginning.

## IF FREQ:

Keep turning the encoder until you see "IF FREQ" and make a quick push. This entry will be used to set the IF frequency.

		I	F				
		F	R	E	Q		

**Frequency is adjusted by the Hz, so all 8 positions are operative: for instance an IF of 10 MHz must be programmed as 10000000 whereas 9 MHz will be 09000000.** The underlined cursor shows the position of the digit

0	4	9	1	3	5	0	0

to be programmed. Turn the encoder to select the desired digit at the position and make a quick push to store the value and move to the next position. When you will get to the 8th position, the next push will store the last digit and the ILER-DDS will jump with to a second submenu where the IF Mode will be selected. There is no "back-space". If you make a mistake you will have to repeat the process since the beginning.

The submenu for IF mode will cycle when the encoder is turned among the following options:

**VFO = IF + RF ; VFO = IF - RF ; VFO = RF - IF ; IF = 0** (this will be used for an RF generator) ; **EXIT**

To select one of the options make a quick push when the screen shows the one you want. The ILER-DDS will restart normally with the new setting. If you don't want to change the program you may use the "EXIT" entry.

These are the **nominal** IF configurations for the ILER-40MK2, ILER-20MK2, ILER-17MK2 and ILER-20V3 transceivers:

BANDA (RF)	LOW LIMIT	UP LIMIT	IF FREQ	IF MODE	VFO/DDS OUT
ILER-40MK2-V3	7.000	7.300	4.915	VFO=IF+RF	11.915 - 12.215
ILER-20MK2-V3	14.000	14.350	3.276	VFO=RF-IF	10.724 - 11.074
ILER-20V3	14.000	14.350	4.000	VFO=RF-IF	10.000 – 10.350
ILER-17	18.068	18.168	3.276	VFO=RF-IF	14.792 – 14.892
ILER-60	5.351.5	5.366.5	4.915	VFO=IF+RF	11.266.5 – 11266.5

Some configuration examples for typical bands and IF values:

BAND (RF)	LOWER LIMIT	UPPER LIMIT	IF FREQ	IF MODE	VFO/DDS OUT
3.500	3.500	3.800	9.000	VFO = IF + RF	12.500 - 12.800
7.000	7.000	7.300	9.000	VFO = IF - RF	2.000 - 1.700*
RF GEN	0	40.000	--	IF=0	0 to 40 MHz

\*Notice that on this mode (VFO = IF - RF) when the RF frequency increases, the VFO/DDS generated frequency should decrease, and vice versa.

## FREQ CAL:

Keep turning the encoder until you see "CAL FREQ" and make a quick push. On this entry it is possible to make a fine adjustment of the frequency of the DDS in order to compensate for tolerances on the reference oscillator or the IF parts, which may be of the order of several hundred Hz. The adjustment margin goes from - 2500 Hz to +2500 Hz. (If this margin is not enough, it may be a sign that the programmed IF value is incorrect).

		F	R	E	Q		
0	7	1	5	0	0	0	0
	+	0		H	Z		

**IMPORTANT: To "calibrate" the frequency of the dial, never adjust the BFO of the transceiver. This is not the way to do it! Do not run the BFO adjustment, which has no relation whatsoever with the frequency spotting of the dial and should NEVER be adjusted to compensate for the LO (VFO) offset.**

The ILER-DDS, when used as local oscillator (LO) for a receiver or transceiver, will be generating a frequency which is the sum of the frequency that you may read on the LCD top line (it is the frequency stored at the menu entry "Save Freq Ini") plus or minus the IF value, stored on the menu entry IF FREQ ( $VFO=IF+RF$ ,  $VFO=IF-RF$  or  $VFO=RF-IF$ ).

When the ILER-DDS is used as RF generator (IF FREQ mode will be IF = 0) the generated frequency will be the one shown on the display.

I will show several ways of doing this adjustment.

*If you use the ILER-DDS as LO:*

- Should you have access to a good frequency counter and you trust its calibration, or a good receiver with enough dial resolution, you may check the theoretical frequency based on the display number and the IF offset and mode. This method, though, will not allow you to compensate the frequency error caused by the IF tolerances.

- If you are using the ILER-DDS for an SSB transceiver and you have access to a good receiver, tune it to the frequency shown on the display and check your transmission on the receiver while you speak. Adjust the calibration value, as if it were a Clarifier, until you get a perfect tuning and your voice sound natural.

- A third option, similar to the previous one, is to do the adjustment "on the air" while listening to a station of known frequency, tweaking the calibration until you get a perfect tuning.

*If you are using the ILER-DDS as RF generator:*

- Should you have access to a good frequency counter and you trust its calibration, just read the frequency generated by the DDS and tweak the calibration until the counter reading and the LCD dial match.

- In case you don't have a counter, you may use a good receiver.

Once you are done, make a quick push to exit. The adjustment will get stored and the ILER-DDS will restart up normally.

**Notes:**

-This is a very precise adjustment, with a resolution of one Hz. If you listen on a receiver the tone change is very slow. Please be patient to obtain a good calibration.

-Should you are going to use a receiver for the adjustment, you should be really sure of the dial precision (do not use medium quality scanners or receivers with unknown precision).

**VOLTS CAL:**

Keep turning the encoder until you see "CAL VOLT" and make a quick push.

You will be adjusting the analog/digital conversion. You will have to know the exact voltage of your power supply or battery. By turning the encoder you will move the displayed value to the supply voltage. Use a good quality multimeter for this measurement. After the adjustment a quick push will exit from the configuration menu and the ILER-DDS will start-up normally.

		V	O	L	T	S	
		C	A	L			
		1	3	.	5	0	
		V	O	L	T		

## S-METER CAL:

The S-METER calibration of the ILER-DDS allows to "SAVE" the level of signal strength for each one 10 intervals from S-0 to S-9. In addition, the settings are independent for each level, so that it can be literally adapted to any S-Meter voltage source of any receiver and can be directly proportional (the voltage increases if the strength of the reception signal increases) or inversely proportional (the voltage decreases when the reception signal increases).

To make these adjustments, you must have another good quality receiver with a reliable "S-METER" meter as a reference or a professional RF generator.

When the "S-METER CAL" screen appears, make a short press. The "DIRECT S-METER" screen will appear and by turning the encoder you will go to the "REVERSED S-METER" and "EXIT" screens.

The configuration of the S-Meter allows two measurement modes: direct and inverse. In "**DIRECT**" mode the level of the S-Meter increases proportionally when the input voltage increases and in "**REVERSED**" mode it happens the other way round, the level of the S-Meter increases when the input voltage decreases.

This allows adapting the S-Meter of the ILER-DDS to the CAG circuit of any receiver.

	S	-	M	E	T	E	R
	C	A	L				

D	I	R	E	C	T		
S	-	M	E	T	E	R	

R	E	V	E	R	S	E	D
S	-	M	E	T	E	R	

You must adapt the S-meter measurements to the voltage levels of your receiver. Choose the "DIRECT S-METER" or "REVERSED S-METER" screen, press the button and the "S-0" screen will appear on the screen and on the second line the voltage level in mV that is currently entering the terminal 10 (RA5 / AN4) of the ILER-DDS. To save that level, press the encoder again and the "S-0 SAVED" screen will appear indicating that the current voltage level has been saved as the reference level for S-0. Then screen S-1 will appear and it will continue proceeding until completing level S-9 (level S-9 + is not programmed, the internal program of the microcontroller calculates it automatically).

		S	-	0			
	X	X	X	m	V		

		S	-	0			
	S	A	V	E	D		

### IMPORTANT: The input voltage range for the S-Meter must be between 0 and 4.9V

The following table shows the relationship between the theoretical signal levels in the antenna and the corresponding "S" levels. Each level "S" represents a difference of 6dBm, that is to say double or half.

"S"	microVolt / 50 ohm antenna	dBm
S0	0.1uV	-127dBm
S1	0.2uV	-121dBm
S2	0.4uV	-115dBm
S3	0.8uV	-109dBm
S4	1.58uV	-103dBm
S5	3.16uV	-97dBm
S6	6.3uV	-91dBm
S7	12.6uV	-85dBm
S8	25uV	-79dBm
S9	50uV	-73dBm

The voltage output for "S-Meter" of our receiver will surely keep little proportionality with the previous table (for example S9 could be 3V, but surely S8 will not be 1.5V or S7 will be 0.75V).

- If you have a professional RF generator, you can inject the signals from the previous table into the receiver and perform the calibration of the S-Meter of the ILER-DDS.
- If you do not have an RF generator, then you can make comparisons with another receiver.

*The strategy is very easy, let's give an example:*

Plug the antenna into the "master" receiver and when the signal is for example from S-7, change the antenna to your receiver, enter the configuration mode and move the encoder until the S-7 screen appears. In the lower line appears the voltage that is arriving at the ILER-DDS input (this reading is informative, it can't exceed 4.9V and obviously you can't change it from the ILER-DDS). Then press the encoder and "S-7 SAVED" will appear on the screen (the ILER-DDS has saved that level as signal S-7).

		S	-	7			
	2	4	3	0	m	V	

		S	-	7			
	S	A	V	E	D		

This way you must continue successively until you save all the levels from S-0 to S-9. Once finished, move the encoder until "EXIT" appears and press.

#### **Important notes:**

- The voltage range at the input of the ILER-DDS must not exceed 4.9V
- In low HF bands, levels S-0, S-1, S2 or even more, are usually a "noise" signal, you can save them with the background level of the antenna when there is no signal.
- Keep in mind that in urban or industrial environments, the background noise may represent a level of S-4 or higher.
- It is not necessary to save all the levels in a single session. The levels can be saved and reviewed independently at any time.
- When you make any adjustment in the "DIRECT S-METER" mode or in the "REVERSED S-METER" mode, then the ILER-DDS will automatically work in that mode.

## Annexes

### CONNECT THE S-METER INPUT TO AN ILER TRANSCEIVER




The S-Meter output of the ILER transceivers ([www.ea3gcy.com](http://www.ea3gcy.com)) is inversely proportional to the strength of the reception signal. **The available ACG voltage is used on the right pin of the "S" terminals** (the pin on the left is not used here).

This pin delivers a voltage of about 12V when there is no reception signal and decreases as the reception signal increases.

*Therefore, you must use the "REVERSED S-METER" mode*

You must add a resistive / 3 divider with a 47K resistor and a 22K resistor plus a 1uF capacitor to filter out fast variations in the audio signal. In this way we can send to the ILER-DDS a voltage margin of less than 4.9V. The voltage input of the ILER-DDS for the S-METER is pin 10 (RA5 / AN4).

See the following images:

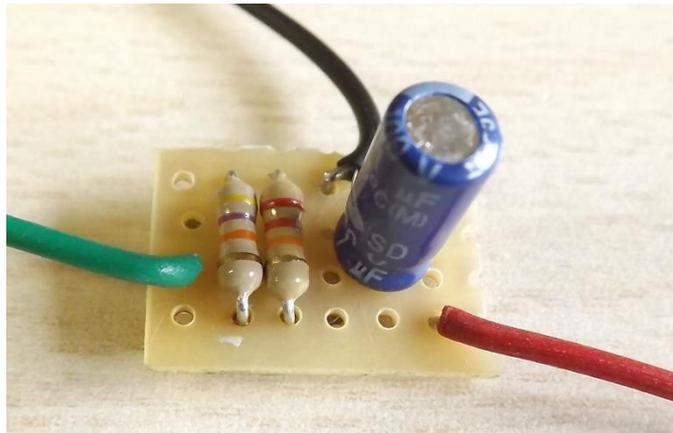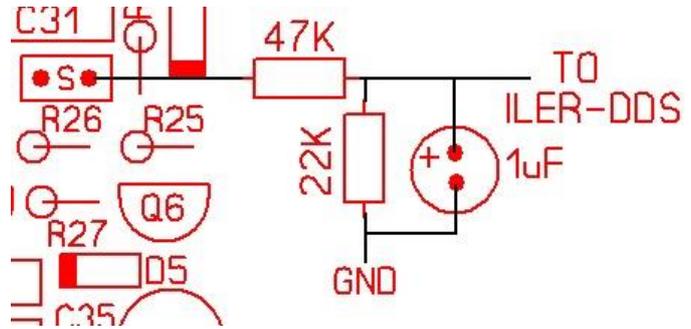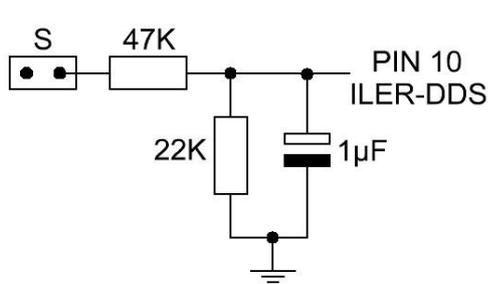

You can mount the resistors and the capacitor on a small perforated board or you can mount the components "in the air" directly on top of the ILER board.

**Note:** The ILER CAG circuit does not start to act until the signal does not exceed 3-4uV (S-5) this is inherent to that circuit.

## CONNECTING THE S-METER INPUT TO OTHER TRANSCEIVERS

You should study the available voltage of your receiver that you can use as a reference for the ILER-DDS S-Meter and adapt it if necessary. **Remember that in no case can it exceed 4.9V.** Normally the receiver's AGC voltage is used. This can be directly or indirectly proportional to the reception signal. Choose the corresponding calibration mode in the "CAL S-METER" menu ("DIRECT S-METER" or "REVERSED S-METER").

You can also experiment by building a small adapter circuit that takes audio signal (before volume control) and converts it into a suitable voltage level for the S-Meter input of the ILER-DDS.


Note: EA3GCY Kits is not responsible for the failures caused in ILER-DDS due to improper use.

## CONNECTING THE INPUT RIT (TX)

To use the RIT function (tuning increment in reception), the ILER-DDS needs to know when the transceiver changes to TX. Pin 8 is the RIT input of the ILER-DDS.

When this entry is connected to GND, the ILER-DDS interprets that it is in TX.

The easiest way to use this input is by connecting it to the PTT line of the transceiver through a 1N4148 diode or similar.

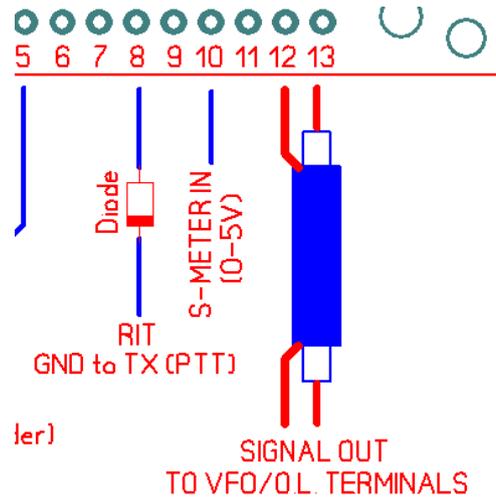

## IF YOUR KIT DOES NOT WORK AFTER FINAL ASSEMBLY

Do not worry, it is quite normal that a kit does not work right away. Take your time, as most of the cases are small errors easy to fix.

Many errors are due to poor soldering or wrongly placed parts. The failure of one of the supplied parts is very rare. Prior to taking any measurements at the board, have a good look, check all connections, inspect the board for parts not soldered, solder bridges between tracks, sockets with bad contacts or wrongly placed parts.

If the kit does not work as expected, follow these steps, in this order:

-Check every step of the assembly manual, the soldering work and the installed parts.

-If you have access to instrumentation, take measures and follow the circuit signals to diagnose what is happening and why.

-Talk with an expert ham or technician and ask him or her to check your work. A pair of fresh eyes may see something you haven't noticed.

-If you think it is needed, I will entertain any request for technical assistance to [ea3gcy@gmail.com](mailto:ea3gcy@gmail.com). If need be, you may send your kit in, but I will have to charge you for the repair work done: I will try to make these charges as reduced as possible.

## LIMITED WARRANTY

**Please read carefully PRIOR to do any work with your kit.**

All parts provided with this kit are guaranteed against any fabrication defect for one year after the sale. The buyer has the option to examine the kit and the instruction manual for 10 days. If during this period he or she decided not to build the kit, it will be possible to send the kit back, with all shipping charges paid by the customer. The seller shipping charges and all other costs involved (Ebay or Paypal charges) will not be reimbursed.

If you plan to ship it back, PLEASE CONSULT how to do it to [ea3gcy@gmail.com](mailto:ea3gcy@gmail.com)

Javier Solans, ea3gcy, guarantees that when the kit is built and adjusted following the information enclosed in this manual, and it is used according to the advices mentioned, it will work according to its specifications.

It is your duty to follow the advices and recommendations of this manual, correctly identify the parts, use good working procedures and have access and correctly use the tools and instruments requirede for the assembly and adjustment of the kit.

In case you think any part for the kit is missing, please make an inventory of all parts with the parts list included on the manual. Please revise all bags, envelopes or boxes carefully. If something is missing, please send me an email and I will mail you the part right away. Even if you don't want to bother with a common part you may have on your junk-box or a local store, please let me know so I can help other customers with a similar problem.


I can also provide a part that you have broken, dammaged or lost by accident.

In case you find any errata or mistake on this manual, or you like to make a comment, please get in touch with me at [ea3gcy@gmail.com](mailto:ea3gcy@gmail.com)


Enjoy building QRP!

73 Javier Solans, ea3gcy


# OUTPUT SIGNAL IMAGES

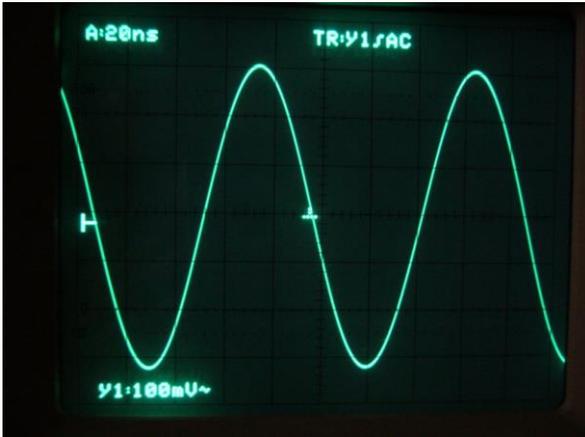

10 MHz output signal. Perfect sinusoidal form.

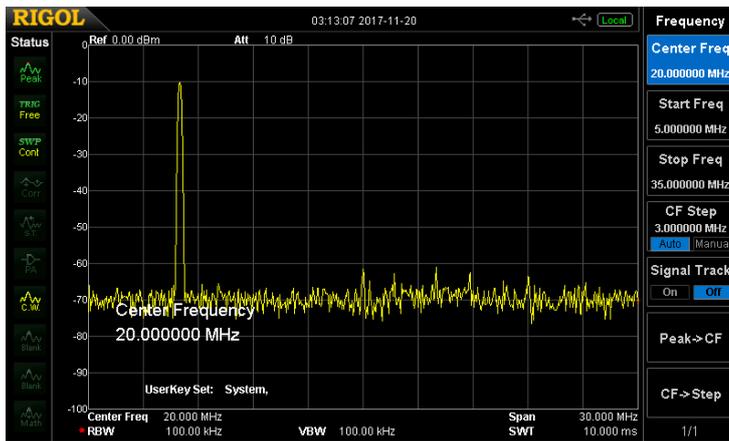

10 MHz output signal. Harmonics hardly appear.

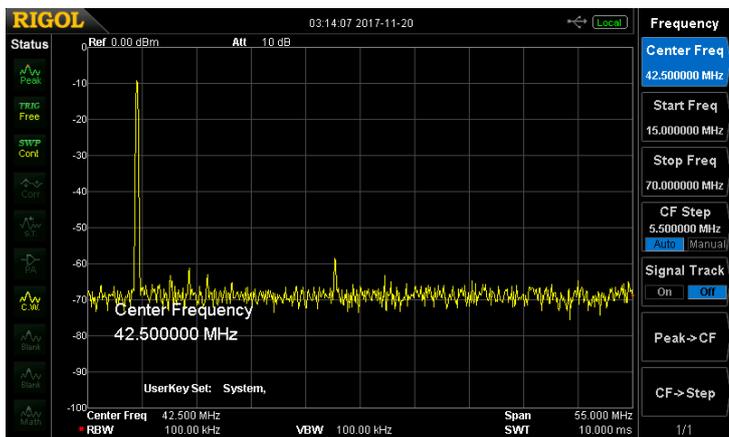

20 MHz output signal

Second harmonic better than -50dBc, the third harmonic does not appear.